


Chain Cutters

Order Product Code

CK5

Chain Cutter No.

Roller chain pins can be removed quickly and easily. Clamp the chain as you see in the picture, setting it in place with the holder. Then simply turn the cutter screw to rapidly remove the pin without damaging the chain. 13 types of chain cutters are available depending on the chain.

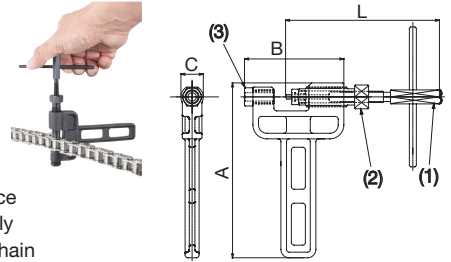

◇ Chain Cutters (CK2 to CK6, CK3W to CK5W) **m** S20C Equivalent **S** Black Oxide Finish

Chain Cutter No.	Chain in Use				A	B	C	Weight (g)
	JIS		Non-JIS Indicator					
CK2	25		219	270 05B	97	51	18	190
CK3	35		410	415 06B	97	51	18	190
CK4	40 41	C2040 C2042	420	425 428 08B	125	73	20	370
CK5	50	C2050 C2052	520	525 528 530	125	73	20	360
CK6	60	C2060H C2062H	630	640 12B	139	100	24	710
CK3W	2-Row 35		CZ3 CY3		125	73	20	370
CK4W	2-Row 40	C2040 C2042	CZ4 CY4		139	100	24	720
CK5W	2-Row 50	C2050 C2052	CZ5 CY5		139	100	24	710

Chain Cutter Components

◇ Cutter Pin (1)

Cutter Pin No.	L	Hex. Size
CKP2	81	8
CKP3	86	8
CKP4	109	10
CKP5	109	10
CKP6	138	12
CKP3W	116	10
CKP4W	141	12
CKP5W	154	12

◇ Cutter Pin Holder (2)

Cutter Pin Holder No.	Hex. Size
CKPH2	14
CKPH3	14
CKPH4	17
CKPH5	17
CKPH6	21
CKPH3W	17
CKPH4W	21
CKPH5W	21

◇ Cutter Holder (3)

Cutter Holder No.	Hex. Size
CKUH2	12
CKUH3	12
CKUH4	13
CKUH5	13
CKUH6	17
CKUH3W	13
CKUH4W	17
CKUH5W	17



Caution

•When cutter pin (1) is tightened as far as possible the lock is triggered and it will be difficult to return. Stop just when the chain pin has penetrated through.

For units larger than CK8-type (#80 chain) or CK6W-type (2-row #60 chain) the body should first be fixed into a vise etc. before continuing. Furthermore, these types have no handle for turning the cutter pin, so a spanner or wrench to suit the model number should be used.



◇ Chain Cutters (CK8 to CK14, CK6W to CK8W)

Chain Cutter No.	Chain in Use			A	B	C	Weight (g)
	JIS	Non-JIS Indicator					
CK8	80	C2080H	C2082H	98	121	36	1,170
CK10	100	C2100H		98	121	36	1,170
CK14	120	140		103	154	36	1,690
CK6W	2-Row 60		CZ6 CY6	98	121	36	1,190
CK8W	2-Row 80			103	154	36	1,810

Chain Cutter Components

◇ Cutter Pin (1)

Cutter Pin No.	L	Hex. Size
CKP8	143	17
CKP10	152	17
CKP14	165	17
CKP6W	160	17
CKP8W	174	17

◇ Cutter Pin Holder (2)

Cutter Pin Holder No.	Hex. Size
CKPH8	27
CKPH10	27
CKPH14	27
CKPH6W	24
CKPH8W	27

◇ Cutter Holder (3)

Cutter Holder No.	Hex. Size
CKUH8	21
CKUH10	21
CKUH14	27
CKUH6W	21
CKUH8W	27



* A handle for the cutter pin is not included, so please use a suitable spanner or wrench that matches the size. Use after fixing the unit within a vise etc.



Caution

- For CK8-types or larger, first shave off the head of the chain pin with a grinder etc. before continuing.
- For units larger than CK8-type or CK6W-type, the body should first be fixed into a vise etc. (not included) before continuing. Furthermore, these types have no handle for turning the cutter pin, so a spanner or wrench to suit the model number should be used.
- When cut the chain pin will remain in the chain plate and will not fall.

(1) Cutter Pin
CKP6W



CKP8*



*At No.8 or larger, the pin shape changes.

(2) Cutter Pin Holder
CKPH6W



(3) Cutter Holder
CKUH6W

